
DIAGRAMS AND PARTS LIST

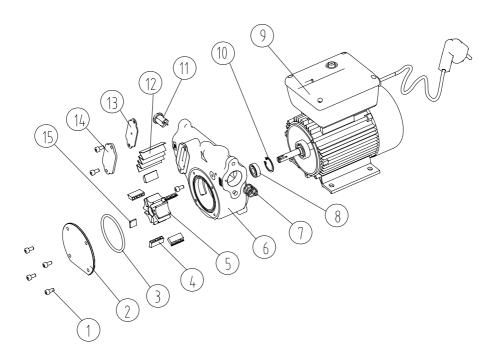

No.	Description	Quantity
No. 1 2 3 4 5 6 7 8 9 10 11 12	Description SCREW M5×10 FRONT COVER O-RING BLADE ROTOR PUMP BODY BY PASS SPRING SEAL MOTOR SPRING COLLAR BY PASS VALVE FILTER	7 1 1 5 1 1 1 1 1 1 1
13	AIRPROOF RUBBER	1
14 15	FILTER COVER KEY	1 1
Best. nr. 05.000-XX		